

PARTS LIST				REVISION
ITEM NO.	PART NO. DWG. NO.	REQ'D	DESCRIPTION	
				2 9/22/98
				REVISED AND RETYPED FROM C818187 REV 1
				A) REVISED TEXT
				DCN-1 GH TMS

INSTRUCTION SHEET, COMFO ELITE. THIS INSTRUCTION SHEET IS MADE FROM 60# WHITE OFFSET PAPER. CONSISTING OF A SELF COVER, PRINTED BOTH SIDES BLACK, WITH FRONT COVER PRINTING pms 347 COLORBAND. OVERALL SIZE IS 11 X 17 INCHES. INSTRUCTION SHEET IS FOLDED FOUR (4) TIMES TO FINAL SIZE OF 4-1/4 X 5-1/2 WITH FRONT PANEL OUT.

MANUAL REVISION IS 2 DATE CODE *898

NOTES:

1. INK, ALL COPY AND LINES PRINT BLACK UNLESS OTHERWISE NOTED.
2. ARTWORK RETAINED ELECTRONICALLY BY MSA PACKAGING GRAPHICS DEPARTMENT.
3. VENDOR'S AUTHORIZED IDENTIFICATION TO PRECEDE DATE REVISION CODE.

AUTHORIZED COUNTRY		CADD REF					DO NOT SCALE DIAG.
DOCUMENT CONTROLLED BY		MINE SAFETY APPLIANCES COMPANY		"THIS DRAWING IS THE PROPERTY OF MINE SAFETY APPLIANCES COMPANY, PITTSBURGH, PENNSYLVANIA, AND IS MADE AVAILABLE TO YOU IN CONFIDENCE AND SUBJECT TO THE FOLLOWING: NO PERMISSION IS GRANTED TO PUBLISH, REPRODUCE, TRANSMIT, OR DISCLOSE THIS DRAWING, OR ANY INFORMATION OR IDEA CONTAINED THEREIN TO OTHERS WITHOUT THE PRIOR WRITTEN CONSENT OF MINE SAFETY APPLIANCES COMPANY EXCEPT FOR THE MANUFACTURE OF ARTICLES FOR MINE SAFETY APPLIANCES COMPANY."			
INTERCHANGEABLE-PART		PITTSBURGH, PA 15230 U.S.A.					
AUER	M.EAST	MSA STANDARD SHOP PRACTICES APPLY		JOB NO E 550219			SCALE FULL
AUSTRALIA	MSA BRITAIN			DATE 3/19/98			
BRAZIL	MSA EUROPE	CODE SYMBOLS		DRAWN BY TRI-LOT			
CANADA	NETHERLANDS	MAJOR A Δ MINOR (NO MARK)		CHECKED BY LOT			
CHILE	PERU	MAJOR B Δ CRITICAL Δ		DATE 4/20/98			
CHINA	S.E. ASIA	TOLERANCES UNLESS OTHERWISE SPECIFIED		PROJECT ENGINEER T.M.SALAPOW			
FRANCE	SPAIN	FRACTIONAL $\pm 1/16$		MGR QUALITY ASSURANCE			
INDIA	SWEDEN	2PL DEC \pm		MGR NEW PRODUCT INTRO			
ITALY		3PL DEC \pm					
JAPAN		ANGULAR \pm					
MEXICO		SEE MSA STANDARD SHOP PRACTICES FOR DRILLED HOLE TOLERANCES					
				SHEET, INSTRUCTION COMFO ELITE RESPIRATOR			
				C 818187			SHEET 1 OF 3

NIOSH APPROVAL INFORMATION**Cautions and Limitations**

- A- Not for use in atmospheres containing less than 19.5 percent oxygen.
- B- Not for use in atmospheres immediately dangerous to life or health.
- C- Do not exceed maximum use concentrations established by regulatory standards.
- H- Do not wear for protection against organic vapors with poor warning properties or those which generate high heats of reaction with sorbent.
- J- Failure to properly use and maintain this product could result in injury or death.
- K- The Occupational Safety and Health Administration regulations require gas-proof goggles to be worn with this respirator when used against formaldehyde.
- L- Follow the manufacturer's User Instructions for changing cartridges and/or filters.
- M- All approved respirators shall be selected, fitted, used, and maintained in accordance with MSHA, OSHA and other applicable regulations.
- N- Never substitute, modify, add, or omit parts. Use only exact replacement parts in the configuration as specified by the manufacturer.
- O- Refer to User's Instructions, and/or maintenance manuals for information on use and maintenance of these respirators.
- P- NIOSH does not evaluate respirators for use as surgical masks.
- S- Special or critical user's instructions and/or specific use limitations apply. Refer to User's Instructions before donning.

Special User Instructions**Mixture of Contaminants —**

NIOSH allows this respirator to be used for protection against a mixture of contaminants that are present simultaneously, or alternately, against one contaminant then another (using the same cartridges or filters) if the mixture meets the following conditions:

- The cartridge/filter must be approved for all contaminants present.
- NIOSH permits mixing of the following contaminants: Organic vapors, sulfur dioxide, chlorine, ammonia, methylamine, chlorine dioxide, hydrogen sulfide, and hydrogen chloride.
- Particulates can be mixed with any other particulate or any gas or vapor for which the cartridge is approved.
- Contaminants present simultaneously must be below IDLH levels for the specific contaminants. If any one contaminant in the mixture exceeds the IDLH concentration, then the entire mixture must be treated as IDLH and the respirator cannot be used (except for escape from particulates with the appropriate filter).
- Mersorb and Mersorb-P100 cartridges can be used against a mixture of chlorine and mercury that are both present simultaneously, but cannot be used if alternating between mercury-contaminated atmospheres and chlorine-contaminated atmospheres.

Mersorb and Mersorb-P100 respirators utilize an end-of-service-life indicator for use against metallic mercury vapor. The small area at the center of the inlet surface of each Mersorb cartridge, and the band around the side of each Mersorb-P100 cartridge, consists of chemically-treated paper. In use, as the paper is exposed to metallic mercury vapor, it changes from orange to brown. When the indicator color changes to brown, the cartridge is beginning to lose its effectiveness against metallic mercury vapor and must be replaced. Thus, the wearer has a constant, positive check on the condition of his cartridge.

Time Use Limitation

N- and R- series filters shall be limited to 8 hours of use (continuous or intermittent against particulates). [Service time can be

extended by performing an evaluation in the specific workplace setting that demonstrates (a) that the extended use will not degrade the filter efficiency below 95% or (b) that the total mass loading of the filter is less than 200 mg.]

WARNING

- This device does NOT supply oxygen. Use only in adequately ventilated areas containing at least 19.5 percent oxygen.
- This respirator must be used in conjunction with the proper chemical or particulate cartridges for protection against specific contaminants.
- Do not use when concentrations of contaminants are unknown or immediately dangerous to life or health (IDLH). (See the respirator NIOSH approval matrix to determine if this device can be used for escape from those concentrations.)
- Do not use when appropriate exposure limit (OSHA, PEL, NIOSH REL, ACGIH TLV, etc.) is not known or when it is below the odor threshold or any other established warning level for the contaminant.
- Leave area immediately if:
 - Breathing becomes difficult;
 - Dizziness or other distress occurs;
 - You taste or smell contaminant;
 - You experience eye, nose or throat irritation.
- Use strictly in accordance with instructions, labels and limitations pertaining to this device.
- This respirator may not provide a satisfactory seal with certain facial characteristics, such as beards or large sideburns, that prevent direct contact between the skin and the sealing surface of the facepiece. Do not use this facepiece if such conditions exist.
- Never alter or modify this device.
- This respirator is for use by trained and qualified personnel only.

Failure to follow these precautions can result in serious personal injury or death.

RESPIRATOR USE LIMITATIONS

The wearer must comply with the following MSA respirator use limitations:

- Maximum Use Concentration (do not exceed any of the following):
 - 10 times the exposure limit for the contaminants present.
 - Immediately dangerous to life or health (IDLH) concentration for any contaminant present.
- Do not wear for protection against substances with poor warning properties or those which generate high heats of reaction with sorbent material in the canister.
- Do not wear for protection against the following contaminants regardless of concentration or time of exposure. This far-from-complete list is offered only as a guide to proper evaluation of the many contaminants found in industry. Contact MSA for further information on other specific materials.

Aerolein	Methanol	Ozone
Aniline	Methyl bromide	Phosgene
Arsine	Methyl chloride	Phosphine
Bromine	Methylene chloride	Phosphorous trichloride
Carbon monoxide	Nickel carbonyl	Silbline
Diisocyanates	Nitric Acid	Sulfur chloride
Dimethylaniline	Nitro compounds:	Urethane or other
Dimethyl sulfate	Nitrogen oxide	diisocyanate-containing
Hydrogen cyanide	Nitroglycerin	paints
Hydrogen selenide	Nitromethane	Vinyl chloride

WARNING

Do not use for urethane paints or other paints containing diisocyanates because of their poor warning properties. Use against such contaminants could result in serious or permanent damage to the respiratory system. Use Air-Supplied Respirators.

- GMI cartridge users are limited to 10 mpc/a for a maximum of 60 minutes and must use the cartridges immediately after opening the bag.

EXPOSURE LIMITS

A listing of acceptable exposure limits from the following sources is provided in MSA's *Response® Respirator Selector* (P/N 697254):

- American Conference of Governmental Industrial Hygienists (ACGIH)
 - Occupational Safety and Health Administration (OSHA)
 - National Institute for Occupational Safety and Health (NIOSH)
 - American Industrial Hygiene Association (AIHA)
- Contact MSA at 1-800-MSA-2222 for information.

Exposure Limits for Mixtures

The American Conference of Governmental Industrial Hygienists (ACGIH) publishes the following information to determine the TLV of a mixture.

First, determine the total concentration of the chemical mixture (C_{Mixture}) from the individual contaminant concentrations (C_1, C_2, C_3, \dots) using the following formula:

$$C_{\text{Mixture}} = C_1 + C_2 + C_3 + \dots$$

The TLV of the mixture is found by using the following formula where T_1, T_2, T_3, \dots are the individual contaminant TLVs and C_1, C_2, C_3, \dots are the individual contaminant concentrations:

$$T_{\text{Mixture}} = \frac{C_{\text{Mixture}}}{\frac{C_1}{T_1} + \frac{C_2}{T_2} + \frac{C_3}{T_3} + \dots}$$

Only use these equations if the contaminants present are actually mixed. Some substances do not mix and may be present separately, for example, in pockets or at different levels. In that case, the lowest TLV of the substances present must be used to determine the appropriate respirator category for protection against all contaminants present.

See MSA's *Response Respirator Selector* (P/N 697254) for additional information.

RESPIRATOR FIT TEST

A qualitative or quantitative respirator fit test must be carried out for each wearer of this respirator to determine the amount of protection it will provide. Respirator fit tests are explained fully in the *American National Standard for Respiratory Protection*, ANSI Z88.2, which is published by the American National Standards Institute, 11 West 42nd Street, New York, New York 10036.

QUANTITATIVE TEST— If a quantitative fit test is used, a fit factor that is at least 100 shall be obtained before that respirator is assigned to an individual.

QUALITATIVE TEST— If a qualitative fit test is used, only validated protocols are acceptable. The individual must pass a test designed to assess a fit factor of at least 100.

WARNING

The user must perform a respirator fit test and follow all warnings and limitations specified. Failure to do so can result in serious personal injury or death.

SERVICE LIFE INDICATOR

The Mersorb and Mersorb-P100 respirators utilize an end-of-service-life indicator for use against metallic mercury vapor. The small area at the center of the inlet surface of each Mersorb® cartridge, and the band around the side of each Mersorb-P100 cartridge, consists of chemically-treated paper. In use, as the paper is exposed to metallic mercury vapor, it changes from orange to brown. When the indicator color changes to brown, the cartridge is beginning to lose its effectiveness against metallic mercury vapor and must be replaced. Thus, the wearer has a constant, positive check on the condition of his cartridge.

CLEANING AND DISINFECTING

The facepiece (with the cartridges removed) should be cleaned and disinfected after every use with MSA Cleaner-Disinfectant Liquid from MSA (P/N 697284).

- Prepare a solution of Cleaner-Disinfectant Liquid and water, following the instructions on the Cleaner-Disinfectant container.
- Immerse soiled equipment in the solution and scrub gently with a soft brush until clean. Take care to clean the exhalation valve in the facepiece and all other parts that exhaled air contacts.
- After the equipment has been immersed for the time specified on the Cleaner-Disinfectant Solution container, rinse thoroughly in plain warm water (maximum 120°F) and then air-dry.

CAUTION

Cleaning and disinfecting at or below 120°F temperature will avoid possible overheating and distortion of parts of the respirator assembly, which would necessitate replacement.

MAINTENANCE

This respirator must be kept in good condition to function properly. When any part shows evidence of excessive wear or damage, it must be replaced immediately with the proper part. Extra parts should be readily available. Refer to the Preparations for Use section for proper inspection of the respirator.

This respirator, when not in use, should be stored in a clean, dry location. Do not distort rubber facepiece during storage.

SUBMITTING COMFO ELITE RESPIRATORS (SILICONE) FOR INCINERATION

Parts of the Comfo Elite custom facepiece assembly (silicone only) have been certified incinerable by Scientific Ecology Group, Inc. (SEG). If the Comfo Elite facepiece will be submitted to SEG for incineration, the following conditions must be satisfied:


- The SEG logo must appear on the facepiece. The SEG logo is located inside the facepiece opposite the date code on Comfo Elite silicone facepieces.
- The following parts must be removed and disposed of separately (refer to the Comfo Elite Facepiece Component illustration):
 - Headband Assembly (Three piece set), P/N 492224;
 - Facepiece Yoke, small, black, P/N 489669, or Facepiece Yoke, medium, silver, P/N 489664, or Facepiece Yoke, large, gold, P/N 489665;
 - Any cartridges.

STANDARD COMFO ELITE FACEPIECE ASSEMBLIES							
Part No.	Size			Rubber		Color	
	Small Model 7-201-2	Medium Model 7-201-1	Large Model 7-201-3	Hycar	Silicone	Black	Green
43DE5	•			•		•	
43DEB	•			•			•
43DE2	•				•	•	
43DE4		•		•		•	
43DE7		•		•			•
43DE1		•		•	•		
43DE6			•	•		•	
43DE9			•	•		•	
43DE3			•	•		•	

PROBED COMFO ELITE FACEPIECE ASSEMBLIES							
Part No.	Size			Rubber		Color	
	Small Model 7-201-5	Medium Model 7-201-4	Large Model 7-201-6	Hycar	Silicone	Black	Green
43BE1	•			•		•	
43BE2	•				•	•	
43BE9		•		•		•	
43BE0		•			•	•	
43BE3			•	•		•	
43BE4			•	•		•	

Probed facepieces are for use while performing quantitative face-piece fit tests.

Probed facepieces are not recognized by NIOSH as approved respirator components.

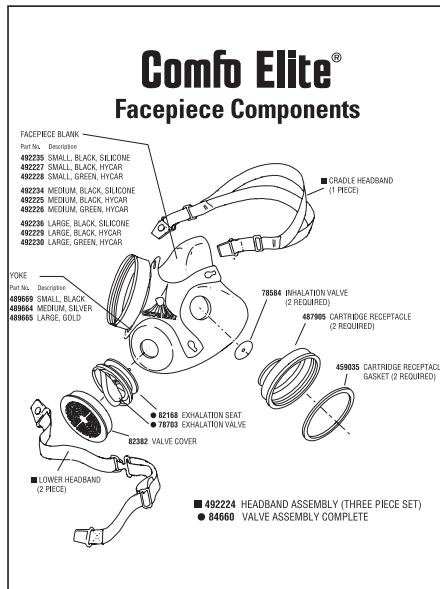

HOW TO DON & FIT THE COMFO ELITE® RESPIRATOR

CHECKS

Look for breaks or tears in the headband material. Also stretch to check the snap (elasticity).

Make sure all headbands, fasteners, and adjusters are in place and not bent.

Check the facepiece for dirt, cracks, tears, or holes. The rubber should be flexible, not stiff.

Look at the shape of the facepiece for possible distortion that may occur if the respirator is not protected during storage.

To check the exhalation valve, unsnap the cover. Lift the valve and inspect the seat and valve for cracks, tears, dirt, and distortion.

Replace the cover. It should spin freely. Also check both of the inhalation valves. Look for the same signs.

Check the aluminum yoke for cracks caused by too much bending. To spot weak points, look for black lines.

The cartridge receptacles must be clean. Make sure the gaskets are in place and seated properly. The gasket has an outer beveled edge which sits under the threads. The gasket part number is located on the outer beveled edge and faces up. Check that the receptacle threads are not worn. Also look for cracks and other damage.

TO CHANGE CARTRIDGES

Cartridges must be replaced when the wearer detects the odor or taste of gases or vapors, or experiences nose or throat irritation, or, for Mersorb or Mersorb-P100 cartridges, when the end-of-service-life indicator changes to a brown color. To change cartridges, unscrew the used cartridge and dispose of them properly.

Check new cartridges for dents or other damage, especially to the metal bead around the bottom. Always use MSA replacement cartridges. COMFO ELITE® Respirators

Grip as much of the cartridge receptacle as possible, then thread the cartridge into the receptacle. Hand-tighten so there is a good seal with the gasket in the bottom of the holder...but don't force it. If the cartridge won't go in easily, back it out and try again.

TO CHANGE FILTERS (Pad style with P/N 489353 Cover or P/N 816285 R95 Filter with P/N 489219 Cover)

Filters must be replaced when excessive breathing resistance is encountered when inhaling, or when the Time Use Limitation is reached (see Special User Instructions). To change filters, unsnap the covers. Remove the used filters and dispose of them properly. Check the cover for dirt or damage.

Put a clean filter into the cover. Always use MSA replacement filters. Ensure that the edge of the filter lies flat in the cover.

Snap the cover (with filter) onto the cartridge. Be careful not to damage the filter.

If you are using a filter only, snap the cover (with filter) on the receptacle. Be careful not to damage the filter. Never load the filter into the receptacle. The P/N 816285 R95 filter can be used on cartridges only.

DONNING

To put on the respirator, place the facepiece over the bridge of your nose and swing the bottom in so that it rests against your chin. Pull the headband over your head so the cradle straddles the crown of your head.

Fit the respirator on your face and fasten the bottom strap around your neck. Don't twist the straps. Use the metal slides to tighten or loosen the fit...but not too tight.

FIT CHECKS

To test the fit, lightly cover the exhalation valve with the palm of your hand. Exhale...if there is a leak, you will feel the air on your face.

Also test by covering the cartridges with the palms of your hands. Again, don't press too hard. Inhale...the facepiece should collapse against your face. If there is a leak with either test, adjust the headbands or reposition the facepiece and test until no leakage is detected.

For Additional Information Call:
1-800-MSA-2222 during regular working hours.
1-800-MSA-5555 after working hours.



instructions

WARNING

This booklet, including the warnings and cautions inside, must be read and followed carefully by all persons who have any responsibility involving its selection, application, service or repair. This respirator will perform as designed only if used and maintained according to the instructions. Otherwise, it could fail to perform as designed and persons who rely on this product could sustain serious personal injury or death.

See inside for instructions, warnings, and limitations for all Comfo Elite Respirators.

For any additional information, call 1-800-MSA-2222 during regular working hours, or 1-800-MSA-5555 after working hours or during emergencies.

See NIOSH insert for approval information.

Manufactured by
MSA MINE SAFETY APPLIANCES COMPANY
TAL 898 (L) Rev. 1 PITTSBURGH, PENNSYLVANIA, U.S.A. 15230
© MSA 1998 818187

WARNING

Do not enter any atmosphere with this respirator unless you know that:

1. You have read, understood and followed all instructions and warnings pertaining to the respirator.
2. The respirator and conditions meet the requirements outlined.
3. The cartridges are the proper type for the contaminant or contaminants present.
4. The amount of oxygen is sufficient to support life (that is, at least 19.5 percent oxygen by volume at sea level). Do not use if oxygen concentration sufficient to support life is questionable.
5. Respirator does not leak (see fit checks).
6. Cartridges do not need to be replaced. Discard exhausted cartridges.
7. You are not colorblind and can distinguish between the beginning and ending colors of the end-of-service life indicator (Mersorb and Mersorb-P100 cartridges only).

Failure to follow the above warnings can result in serious personal injury or death.

Count on MSA