




uvex genesis[®] Lens Exchange Instructions

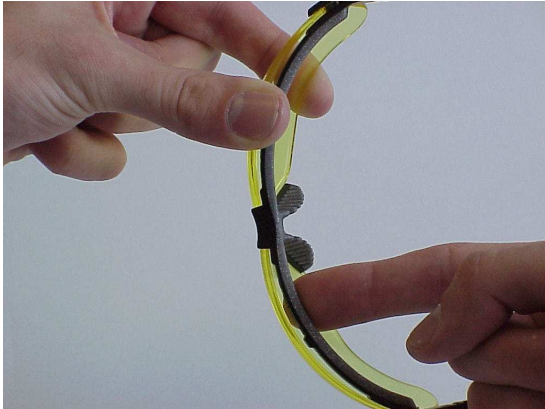


Hold **uvex genesis** by the top and bottom of the lens in left hand and place your right index finger under the brow bar as shown.

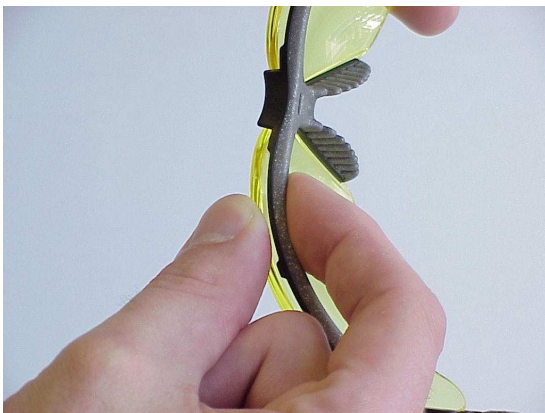

Place your right thumb on the top of the **uvex genesis** lens as shown.

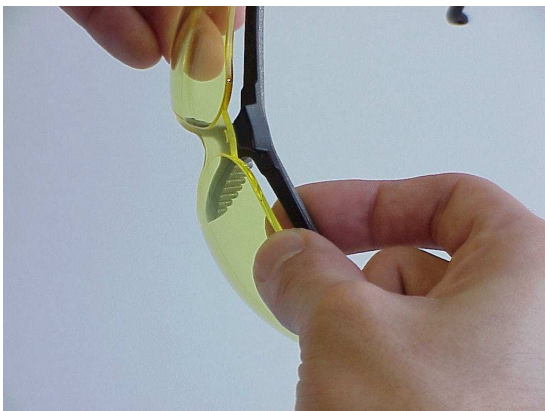

Push downward with your right thumb and pull upwards with your right index finger. The **uvex genesis** lens should “pop” out of the center frame snap.

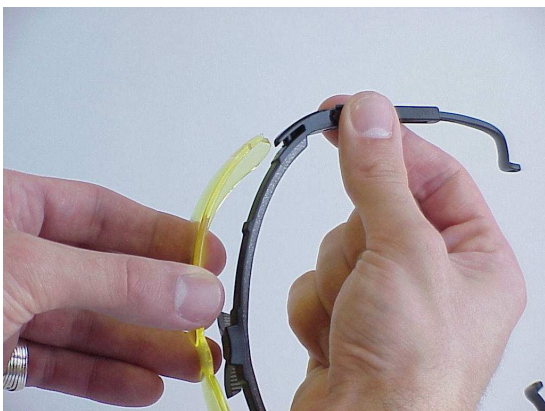

Pull the **uvex genesis** frame straight from the lens as shown. Repeat this for the other side of the frame.

Reinstall a new **uvex genesis** lens in the reverse order.